

Step 1 Check required specification for Phone or Tablet

① Before installing OKOK App, kindly check if the phone or tablet meets following requirement:

Compatible with iOS7.0 and above with Bluetooth 4.0 and above

For Phone 4s, For Phone 5, For Phone 5c, For Phone 5s
For Phone 6, For Phone 6 Plus, For iPod touch5, For iPad 3
For iPad 4, For iPad Air, For iPad Air 2, For iPad mini
For iPad mini 2, For iPad mini 3

Compatible with Android 4.3 and above with Bluetooth 4.0 and above


SAMSUNG: For galaxy s5, For galaxy s4, For galaxy s3,
For galaxy note4, For galaxy note3, For galaxy note2,
For galaxy grand2

XIAOMI: For XIAOMI Note, For XIAOMI4, For XIAOMI3,
For XIAOMI2/2s, For XIAOMI tablet, For HONGMI Note 4G,
For HONGMI 1s

HUAWEI: For Ascend P8, For Ascend P7, For Honor 6Plus,
For Honor 6, For mate7, For Ascend G7

Support Android4.3 and above for selected Android devices with Bluetooth 4.0 and above

Step 2 Install the batteries

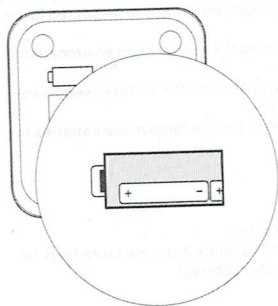

- 1/ - Open the cover of battery
- 2/ - Install the batteries in the right direction
- 3/ - Close the cover

Step 3 Install App

- 1/ Switch on Bluetooth
- 2/ Phone or Tablet connects to Net (WiFi, 3G or 4G)

Use your device to scan QR Code or search OKOK International from App Store/Google Play to install App.




Step 4 Pair the devices, register and complete user information

Open APP, begin to weigh and pair

Register as a user

Complete personal information

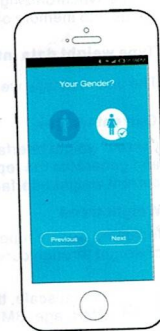

Specification

Display: All data displayed when power on

Capacity: 3kg-180kgs

Division: 1D=100g/0.2lb

Unit: KG/LB

Voltage: 4.5V

Battery: 3 *AAA battery

Low battery indication: 2.4V±0.2V, display "Lo" and power off

Current: ≤25mA

Standby current: ≤10μA

Overload indication: overload more than 2.5kgs, total 182.5kgs display "Err"

Best working temperature: 5~35℃

Storage temperature: -10~60℃

Moisture Environment: ≤90%RH

Instruction for OKOK App

Instantly weighing

Open the OKOK APP, it will remind you to switch on Bluetooth. Turn Bluetooth on and the auto-pair process completed automatically. User begin weighing, the weight data will be synchronizing to APP. If the Bluetooth disconnected, the weight data will be saved into memory of the scale, then synced to APP while the Bluetooth connected.

Type weight data into APP

The user can type weight data into APP to keep a track

Current weight

Current weight interface displays weight information of the user and family members, and generates the report and give health advice based on the measurement. Including current weight interface, weight list interface, date report and notice.

Weight trend

Including weekly report, monthly report and quarterly report, indicating the changes of weight through curves.

Notice

For fat scale, there are 12 data: weight, body fat, visceral fat, muscle, bone, BMR, age, BMI, Water, Protein, Obesity degree, weight without fat.

Management of scale

Management of scale including two parts: scale management and connection management

Scale management

Manage the process of pairing, bind and unbind

Connection management

Including Bluetooth status indication and Bluetooth connection

Account and user

Including account management and user management

Account Management

Including registration, login in, change password, forget password, links to Facebook, Twitter...etc

User management

Manage user information, including nickname, birthday, height, gender...etc, also managing family member account and information (under the same registration account).

Warnings

1. Please keep the scale away from wet floor, don't use the scale if the glass is wet in case of slip.
2. Please stand on the middle of the scale in case of turnover.
3. The platform of the scale is made of glass, please avoid sharp or harsh things scratching the surface, excessive forces or sudden shocks, unexpected fallen-off will break the glass and injure the user.
4. The Bluetooth scale is not waterproof. Keep the surrounding environment dry, do not submerge it in water.
5. Use soft cloth with neutral cleaning liquids to clean the surface, keep away contacting with organic solvent nor chemicals.
6. When the batteries are in low power status, please remove the batteries in case of leaking liquids corrode the scale.

Notices

1. Please stand on the scale in the right direction.
2. Please stand on the scale no less than 10 seconds if you measure body fat.
3. Please confirm gender, height, weight data is correct